www.kondator.se

Powerdot MINI

☐ 935-PM51W
■ 935-PM51

A - Installation into round hole
B - Installation into tailored hole

CONTENT:

x1

x1

- 2 USB CHARGER Ports (5V, 2.4A)
- 1.5 meter cable

1A DRILL
Drill a hole in the table.

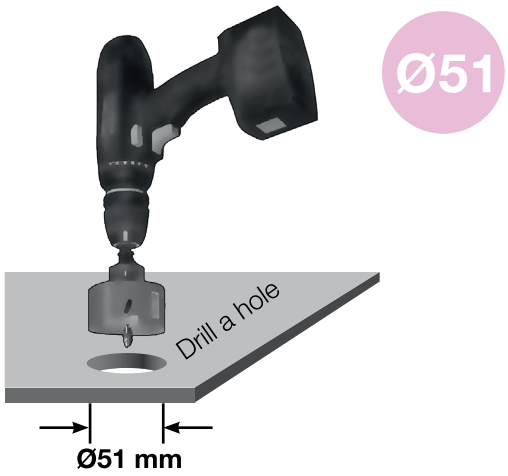

2A INSERT
Insert Powerdot into the hole and feed the power plug through the table and the plastic fastening nut.

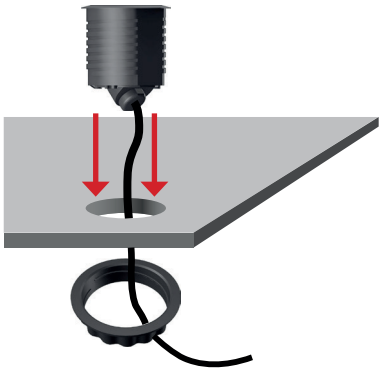

3A TURN CLOCKWISE & PLUG IN
Turn the plastic fastening nut as far up the thread as possible. Make sure it has been thoroughly tightened. Lastly, plug the Schuko plug into the wall socket.

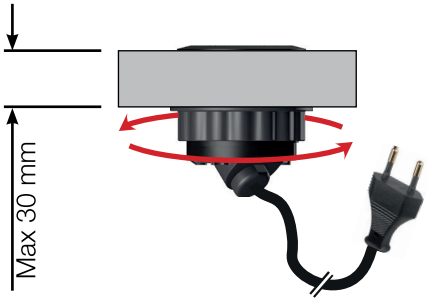

1B MILL
Mill a hole in the table.

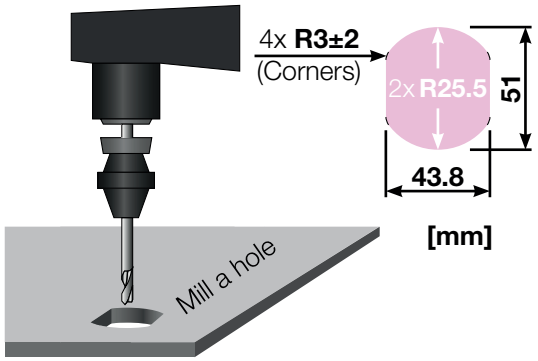

2B INSERT
Insert Powerdot into the hole and feed the power plug through the plastic fastening bolt.

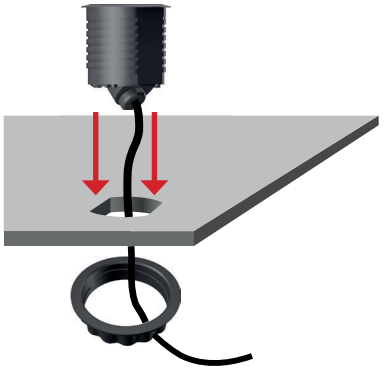

3B TURN CLOCKWISE & PLUG IN
Turn the plastic fastening nut as far up the thread as possible. Make sure it has been thoroughly tightened. Lastly, plug the Schuko plug into the wall socket.

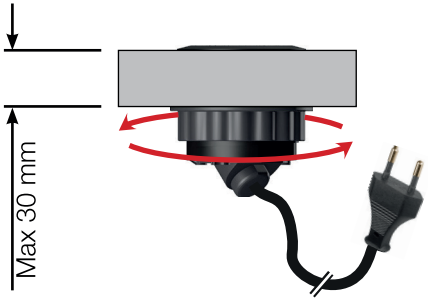

KONDATOR

Kondator AB, Energivägen 8 - Box 121, SE-135 23 TYRESÖ, SWEDEN